

NCU	SYSTEM	Inf. bod Short Description	POPIS Long Description	Hardware Object	Type of Controller	HW Item	SW Item	Type of Signal	Range Low	Range High	UNITS	State 0 (Open)	State 1 (Closed)	Panel	Poznámka Notice
NCU08	2P334	TT91	Teplota v místnosti 2P334	DX001CF2	DX - 8454	AI1	AI1	0-10V	0	40	°C			CF2	
NCU08	2P334	MT92	Vlhkost vzduchu v míst. 2P334	DX001CF2	DX - 8454	AI2	AI2	0-10V	0	100	%			CF2	
NCU08	2P334	TT93	Teplota v místnosti 2P334	DX001CF2	DX - 8454	AI3	AI3	0-10V	0	40	°C			CF2	
NCU08	2P334	MT94	Vlhkost vzduchu v místnosti 2P334	DX001CF2	DX - 8454	AI4	AI4	0-10V	0	100	%			CF2	
NCU08				DX001CF2	DX - 8454	AI5	AI5							CF2	
NCU08				DX001CF2	DX - 8454	AI6	AI6							CF2	
NCU08				DX001CF2	DX - 8454	AI7	AI7							CF2	
NCU08				DX001CF2	DX - 8454	AI8	AI8							CF2	
NCU08	2P334	MP01O	Vyv. páry m.č. 2P334- chod	DX001CF2	DX - 8454	DI1	DI1					stop	chod	CF2	
NCU08	2P334	MP01E	Vyv. páry m.č. 2P334- porucha	DX001CF2	DX - 8454	DI2	DI2					OK	porucha	CF2	
NCU08				DX001CF2	DX - 8454	DI3	DI3							CF2	
NCU08	2P334	MP02O	Vyv. páry m.č. 2P334- chod	DX001CF2	DX - 8454	DI4	DI4					stop	chod	CF2	
NCU08	2P334	MP02E	Vyv. páry m.č. 2P334- porucha	DX001CF2	DX - 8454	DI5	DI5					OK	porucha	CF2	
NCU08				DX001CF2	DX - 8454	DI6	DI6							CF2	
NCU08				DX001CF2	DX - 8454	DI7	DI7							CF2	
NCU08	2P334	KVIT	Kvitování poruchy	DX001CF2	DX - 8454	DI8	DI8					x	KVIT	CF2	
NCU08	2P334	Y100	RV fancoily 1.část m.č. 2P334	DX001CF2	DX - 8454	AO1	AO1	0-10V						CF2	
NCU08	2P334	Y200	RV fancoily 2.část m.č. 2P334	DX001CF2	DX - 8454	AO2	AO2	0-10V						CF2	
NCU08	2P334	MP01	Vyvíječ páry 1 m.č. 2P334	DX001CF2	DX - 8454	AO9	AO9	0-10V						CF2	
NCU08	2P334	MP02	Vyvíječ páry 2 m.č. 2P334	DX001CF2	DX - 8454	AO10	AO10	0-10V						CF2	
NCU08	2P334	Y1	RV topné těleso m.č. 2P334	DX001CF2	DX - 8454	AO11	AO11	0-10V						CF2	
NCU08				DX001CF2	DX - 8454	AO12	AO12							CF2	
NCU08				DX001CF2	DX - 8454	AO13	AO13							CF2	
NCU08				DX001CF2	DX - 8454	AO14	AO14							CF2	
NCU08	2P334	M101	FC Č.101 m.č.2P334 - zapni	DX001CF2	DX - 8454	DO3	DO3					vypni	zapni	CF2	
NCU08	2P334	M102	FC Č.102 m.č.2P334 - zapni	DX001CF2	DX - 8454	DO4	DO4					vypni	zapni	CF2	
NCU08	2P334	M103	FC Č.103 m.č.2P334 - zapni	DX001CF2	DX - 8454	DO5	DO5					vypni	zapni	CF2	
NCU08	2P334	M104	FC Č.104 m.č.2P334 - zapni	DX001CF2	DX - 8454	DO6	DO6					vypni	zapni	CF2	
NCU08	2P334	M105	FC Č.105 m.č.2P334 - zapni	DX001CF2	DX - 8454	DO7	DO7					vypni	zapni	CF2	
NCU08	2P334	M106	FC Č.106 m.č.2P334 - zapni	DX001CF2	DX - 8454	DO8	DO8					vypni	zapni	CF2	
NCU08	2P334	MP01G	Vyv. páry m.č. 2P334 - blokování	XT101CF2	XP-9103/1	DO1	2DO1					blok	deblok	CF2	
NCU08	2P334	MP02G	Vyv. páry m.č. 2P334 - blokování	XT101CF2	XP-9103/1	DO2	2DO2					blok	deblok	CF2	
NCU08	2P334	M107	FC Č.107 m.č.2P334 - zapni	XT101CF2	XP-9103/1	DO3	2DO3					vypni	zapni	CF2	
NCU08	2P334	M108	FC Č.108 m.č.2P334 - zapni	XT101CF2	XP-9103/1	DO4	2DO4					vypni	zapni	CF2	
NCU08	2P334	M109	FC Č.109 m.č.2P334 - zapni	XT101CF2	XP-9103/1	DO5	2DO5					vypni	zapni	CF2	
NCU08	2P334	M110	FC Č.110 m.č.2P334 - zapni	XT101CF2	XP-9103/1	DO6	2DO6					vypni	zapni	CF2	
NCU08				XT101CF2	XP-9103/1	DO7	2DO7					vypni	zapni	CF2	
NCU08	2P334	Sumal	Sumární porucha 2P334	XT101CF2	XP-9103/1	DO8	2DO8					vypni	zapni	CF2	
NCU08	2P334	M201	FC Č.201 m.č.2P334 - zapni	XT101CF2	XP-9103/2	DO1	2DO1					vypni	zapni	CF2	

NCU08	2P334	M202	FC Č.202 m.č.2P334 - zapni	XT101CF2	XP-9103/2	DO2	2DO2					vypni	zapni	CF2
NCU08	2P334	M203	FC Č.203 m.č.2P334 - zapni	XT101CF2	XP-9103/2	DO3	2DO3					vypni	zapni	CF2
NCU08	2P334	M204	FC Č.204 m.č.2P334 - zapni	XT101CF2	XP-9103/2	DO4	2DO4					vypni	zapni	CF2
NCU08	2P334	M205	FC Č.205 m.č.2P334 - zapni	XT101CF2	XP-9103/2	DO5	2DO5					vypni	zapni	CF2
NCU08	2P334	M206	FC Č.206 m.č.2P334 - zapni	XT101CF2	XP-9103/2	DO6	2DO6					vypni	zapni	CF2
NCU08	2P334	M207	FC Č.207 m.č.2P334 - zapni	XT101CF2	XP-9103/2	DO7	2DO7					vypni	zapni	CF2
NCU08	2P334	M208	FC Č.208 m.č.2P334 - zapni	XT101CF2	XP-9103/2	DO8	2DO8					vypni	zapni	CF2
NCU08	2P334	LAH101	Lmax .kond.FC101 m.č.2P334	XT201CF2	XP-9105/1	DI1	1DI1					Lmax	OK	CF2
NCU08	2P334	LAH102	Lmax. kond.FC102 m.č.2P334	XT201CF2	XP-9105/1	DI2	1DI2					Lmax	OK	CF2
NCU08	2P334	LAH103	Lmax. kond.FC103 m.č.2P334	XT201CF2	XP-9105/1	DI3	1DI3					Lmax	OK	CF2
NCU08	2P334	LAH104	Lmax. kond.FC104 m.č.2P334	XT201CF2	XP-9105/1	DI4	1DI4					Lmax	OK	CF2
NCU08	2P334	LAH105	Lmax. kond.FC105 m.č.2P334	XT201CF2	XP-9105/1	DI5	1DI5					Lmax	OK	CF2
NCU08	2P334	LAH106	Lmax. kond.FC106 m.č.2P334	XT201CF2	XP-9105/1	DI6	1DI6					Lmax	OK	CF2
NCU08	2P334	LAH107	Lmax. kond.FC107 m.č.2P334	XT201CF2	XP-9105/1	DI7	1DI7					Lmax	OK	CF2
NCU08	2P334	LAH108	Lmax. kond.FC108 m.č.2P334	XT201CF2	XP-9105/1	DI8	1DI8					Lmax	OK	CF2
NCU08	2P334	LAH109	Lmax. kond.FC109 m.č.2P334	XT201CF2	XP-9105/2	DI1	2DI1					Lmax	OK	CF2
NCU08	2P334	LAH110	Lmax. kond.FC110 m.č.2P334	XT201CF2	XP-9105/2	DI2	2DI2					Lmax	OK	CF2
NCU08	2P334	LAH201	Lmax. kond.FC201 m.č.2P334	XT201CF2	XP-9105/2	DI3	2DI3					Lmax	OK	CF2
NCU08	2P334	LAH202	Lmax. kond.FC202 m.č.2P334	XT201CF2	XP-9105/2	DI4	2DI4					Lmax	OK	CF2
NCU08	2P334	LAH203	Lmax. kond.FC203 m.č.2P334	XT201CF2	XP-9105/2	DI5	2DI5					Lmax	OK	CF2
NCU08	2P334	LAH204	Lmax. kond.FC204 m.č.2P334	XT201CF2	XP-9105/2	DI6	2DI6					Lmax	OK	CF2
NCU08	2P334	LAH205	Lmax. kond.FC205 m.č.2P334	XT201CF2	XP-9105/2	DI7	2DI7					Lmax	OK	CF2
NCU08	2P334	LAH206	Lmax. kond.FC206 m.č.2P334	XT201CF2	XP-9105/2	DI8	2DI8					Lmax	OK	CF2
NCU08	2P334	LAH207	Lmax. kond.FC207 m.č.2P334	XT301CF2	XP-9104/1	DI1	1DI1					Lmax	OK	CF2
NCU08	2P334	LAH208	Lmax. kond.FC208 m.č.2P334	XT301CF2	XP-9104/1	DI2	1DI2					Lmax	OK	CF2
NCU08	2P334	LAH209	Lmax. kond.FC209 m.č.2P334	XT301CF2	XP-9104/1	DI3	1DI3					Lmax	OK	CF2
NCU08	2P334	LAH210	Lmax. kond.FC210 m.č.2P334	XT301CF2	XP-9104/1	DI4	1DI4					Lmax	OK	CF2
NCU08	2P334	M209	FC Č.209 m.č.2P334 - zapni	XT301CF2	XP-9104/1	DO5	1DO5					vypni	zapni	CF2
NCU08	2P334	M210	FC Č.210 m.č.2P334 - zapni	XT301CF2	XP-9104/1	DO6	1DO6					vypni	zapni	CF2
NCU08				XT301CF2	XP-9104/1	DO7	1DO7							CF2
NCU08				XT301CF2	XP-9104/1	DO8	1DO8							CF2
NCU08	2P333	TT91	Teplota v místnosti 2P333	DX002CF2	DX - 8454	AI1	AI1	0-10V	0	40	°C			CF2
NCU08	2P326	TT91	Teplota v místnosti 2P326	DX002CF2	DX - 8454	AI2	AI2	0-10V	0	40	°C			CF2
NCU08	2P326	MT92	Vlhkost vzduchu v místn. 2P326	DX002CF2	DX - 8454	AI3	AI3	0-10V	0	100	%			CF2
NCU08				DX002CF2	DX - 8454	AI4	AI4							CF2
NCU08				DX002CF2	DX - 8454	AI5	AI5							CF2
NCU08				DX002CF2	DX - 8454	AI6	AI6							CF2
NCU08				DX002CF2	DX - 8454	AI7	AI7							CF2
NCU08				DX002CF2	DX - 8454	AI8	AI8							CF2
NCU08	2P326	MP01O	Vyv. páry m.č. 2P326- chod	DX002CF2	DX - 8454	DI1	DI1					stop	chod	CF2
NCU08	2P326	MP01E	Vyv. páry m.č. 2P326- porucha	DX002CF2	DX - 8454	DI2	DI2					OK	porucha	CF2
NCU08	VZT45_22	PK_03R	PPK - READY	DX002CF2	DX - 8454	DI3	DI3					požár	ready	CF2
NCU08	2P326	MP02O	Vyv. páry m.č. 2P326- chod	DX002CF2	DX - 8454	DI4	DI4					stop	chod	CF2

NCU08	2P326	MP02E	Vyv. páry m.č. 2P326- porucha	DX002CF2	DX - 8454	DI5	DI5					OK	porucha	CF2	
NCU08	VZT45_22	PK_04R	PPK - READY	DX002CF2	DX - 8454	DI6	DI6					požár	ready	CF2	
NCU08	VZT48_21	PK_04R	PPK - READY	DX002CF2	DX - 8454	DI7	DI7					požár	ready	CF2	
NCU08	2P326	KVIT	Kvitování poruchy	DX002CF2	DX - 8454	DI8	DI8					x	KVIT	CF2	
NCU08	2P333	Y100	RV fancoily 1.část m.č.2P333	DX002CF2	DX - 8454	AO1	AO1	0-10V						CF2	
NCU08	2P333	Y200	RV fancoily 2.část m.č. 2P333	DX002CF2	DX - 8454	AO2	AO2	0-10V						CF2	
NCU08	2P333	Y1	RV topné těleso 2P333	DX002CF2	DX - 8454	AO9	AO9	0-10V						CF2	
NCU08	2P326	Y100	RV fancoily 1.část m.č.2P326	DX002CF2	DX - 8454	AO10	AO10	0-10V						CF2	
NCU08	2P326	Y200	RV fancoily 2.část m.č. 2P326	DX002CF2	DX - 8454	AO11	AO11	0-10V						CF2	
NCU08	2P326	Y1	RV topné těleso 2P326	DX002CF2	DX - 8454	AO12	AO12	0-10V						CF2	
NCU08	2P326	MP01	Vyvíječ páry1,2 m.č. 2P326	DX002CF2	DX - 8454	AO13	AO13	0-10V						CF2	
NCU08				DX002CF2	DX - 8454	AO14	AO14							CF2	
NCU08	2P333	M101	FC Č.101 a UV m.č.2P333 - zapni	DX002CF2	DX - 8454	DO3	DO3					vypni	zapni	CF2	
NCU08	2P333	M201	FC Č.201 a UV m.č.2P333 - zapni	DX002CF2	DX - 8454	DO4	DO4					vypni	zapni	CF2	
NCU08	2P326	M101	FC Č.101 a UV m.č.2P326 - zapni	DX002CF2	DX - 8454	DO5	DO5					vypni	zapni	CF2	
NCU08	2P326	M102	FC Č.102 a UV m.č.2P326 - zapni	DX002CF2	DX - 8454	DO6	DO6					vypni	zapni	CF2	
NCU08	2P326	M103	FC Č.103 a UV m.č.2P326 - zapni	DX002CF2	DX - 8454	DO7	DO7					vypni	zapni	CF2	
NCU08	2P326	M104	FC Č.104 a UV m.č.2P326 - zapni	DX002CF2	DX - 8454	DO8	DO8					vypni	zapni	CF2	
NCU08	2P326	MP01G	Vyv. páry m.č. 2P326- blokovat	XT102CF2	XP-9103/1	DO1	2DO1					blok	chod	CF2	
NCU08	2P326	MP02G	Vyv. páry m.č. 2P326- blokovat	XT102CF2	XP-9103/1	DO2	2DO2					blok	chod	CF2	
NCU08	2P326	M105	FC Č.105 a UV m.č.2P326 - zapni	XT102CF2	XP-9103/1	DO3	2DO3					vypni	zapni	CF2	
NCU08	2P326	M201	FC Č.201 a UV m.č.2P326 - zapni	XT102CF2	XP-9103/1	DO4	2DO4					vypni	zapni	CF2	
NCU08	2P326	M202	FC Č.202 a UV m.č.2P326 - zapni	XT102CF2	XP-9103/1	DO5	2DO5					vypni	zapni	CF2	
NCU08	2P326	M203	FC Č.203 a UV m.č.2P326 - zapni	XT102CF2	XP-9103/1	DO6	2DO6					vypni	zapni	CF2	
NCU08	2P326	M204	FC Č.204 a UV m.č.2P326 - zapni	XT102CF2	XP-9103/1	DO7	2DO7					vypni	zapni	CF2	
NCU08	2P326	Sumal01	Sumární porucha 2P326	XT102CF2	XP-9103/1	DO8	2DO8					OK	porucha	CF2	
NCU08	2P333	LAH101	Lmax. kond.FC101 m.č.2P333	XT102CF2	XP-9104/2	DI1	2DI1					Lmax	OK	CF2	
NCU08	2P333	LAH102	Lmax. kond.FC201 m.č.2P333	XT102CF2	XP-9104/2	DI2	2DI2					Lmax	OK	CF2	
NCU08	2P326	LAH101	Lmax. kond.FC101 m.č.2P326	XT102CF2	XP-9104/2	DI3	2DI3					Lmax	OK	CF2	
NCU08	2P326	LAH102	Lmax. kond.FC102 m.č.2P326	XT102CF2	XP-9104/2	DI4	2DI4					Lmax	OK	CF2	
NCU08	2P326	M205	FC Č.205 a UV m.č.2P326 - zapni	XT102CF2	XP-9104/2	DO5	2DO5					vypni	zapni	CF2	
NCU08	VZT45_22	PK_03	PPK - Zavři	XT102CF2	XP-9104/2	DO6	2DO6					x	zavři	CF2	
NCU08	VZT45_22	PK_04	PPK - Zavři	XT102CF2	XP-9104/2	DO7	2DO7					x	zavři	CF2	
NCU08	VZT48_21	PK_04	PPK - Zavři	XT102CF2	XP-9104/2	DO8	2DO8					x	zavři	CF2	
NCU08	2P326	LAH103	Lmax. kond. FC103 m.č.2P326	XT202CF2	XP-9105/1	DI1	1DI1					Lmax	OK	CF2	
NCU08	2P326	LAH104	Lmax. kond.FC104 m.č.2P326	XT202CF2	XP-9105/1	DI2	1DI2					Lmax	OK	CF2	
NCU08	2P326	LAH105	Lmax. kond.FC105 m.č.2P326	XT202CF2	XP-9105/1	DI3	1DI3					Lmax	OK	CF2	
NCU08	2P326	LAH201	Lmax. kond.FC201 m.č.2P326	XT202CF2	XP-9105/1	DI4	1DI4					Lmax	OK	CF2	
NCU08	2P326	LAH202	Lmax. kond.FC202 m.č.2P326	XT202CF2	XP-9105/1	DI5	1DI5					Lmax	OK	CF2	
NCU08	2P326	LAH203	Lmax. kond.FC203 m.č.2P326	XT202CF2	XP-9105/1	DI6	1DI6					Lmax	OK	CF2	
NCU08	2P326	LAH204	Lmax. kond.FC204 m.č.2P326	XT202CF2	XP-9105/1	DI7	1DI7					Lmax	OK	CF2	
NCU08	2P326	LAH205	Lmax. kond.FC205 m.č.2P326	XT202CF2	XP-9105/1	DI8	1DI8					Lmax	OK	CF2	
NCU08	INERG_5	REZERVA		XT202CF2	XP-9105/2	DI1	2DI1							CF2	



